


Aoomii Meow Star / Meow Elf

Generation 2 Core Manual · Rebuilt from supplied print scans

Transcribed, reordered and redrawn from supplied printed pages. Core diagrams identify controls; they are not disassembly instructions. The finished plush appearance follows the actual product.

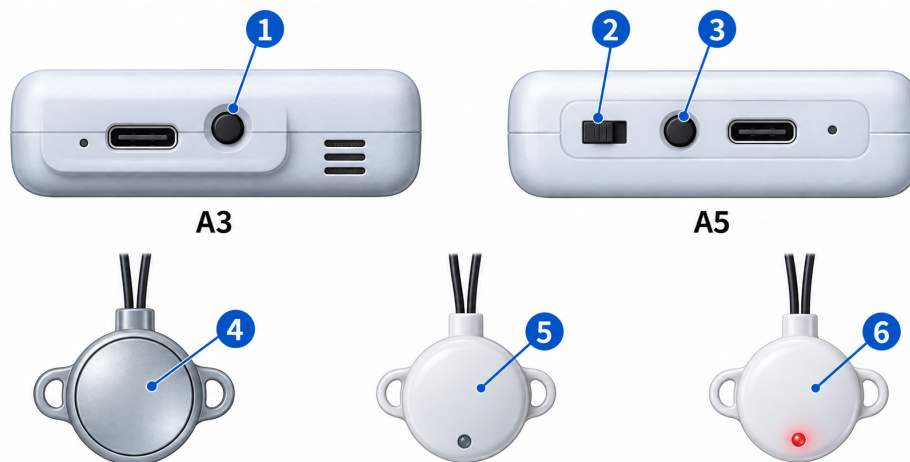

阅读顺序 / CONTENTS

- 01 Identify the core and accessories
- 02 Charging, lights and specifications
- 03 Power and pairing controls
- 04 Tuya app and first connection
- 05 Volume, history and roles
- 06 Conversation, mute and wake
- 07 Touch and expressions
- 08 Useful voice commands
- 09 Firmware updates
- 10 Safety, cleaning and service


01 Identify the core and accessories

This manual covers the generation-2 AI BOX core used by Meow Star and Meow Elf. Identify the rear controls on your unit: A3 has one combined power/pair button; A5 has a separate sliding power switch and round pairing button. Do not infer A3 or A5 from the plush product name.

Diagram: 1 A3 power/pair button; 2 A5 power switch; 3 A5 pairing button; 4 separate conversation button (called the right-hand button in the source); 5 inactive touch sensor; 6 touch sensor with red indicator.

Locations follow the finished product. Do not disassemble.

The source package list contains one device, one manual and one Type-C cable. The power adapter is sold separately.

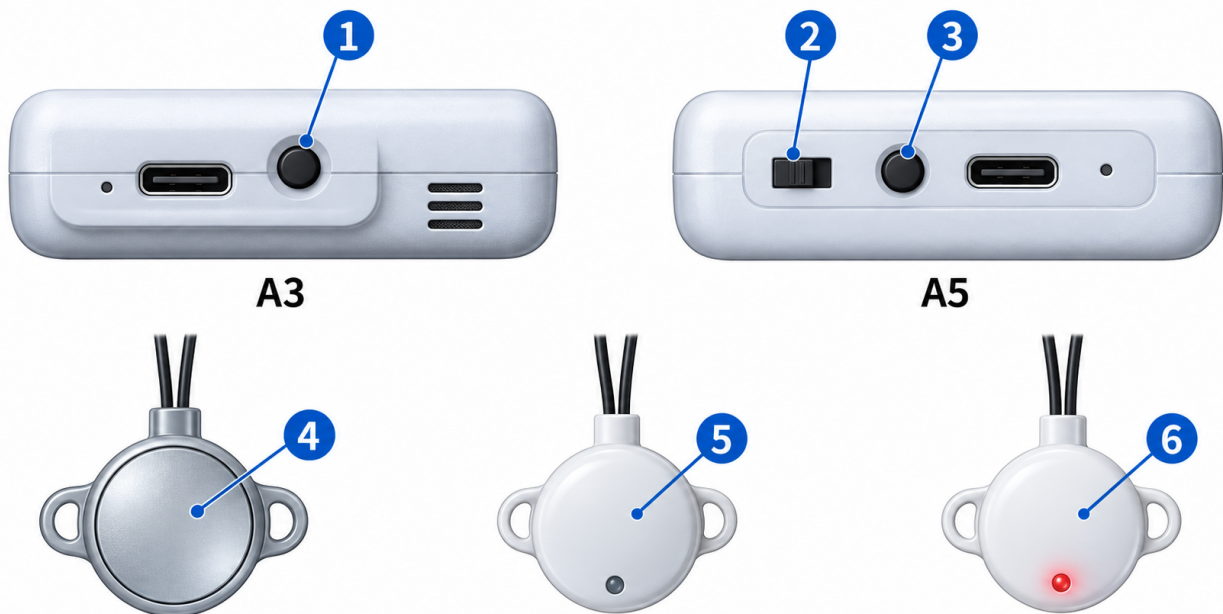

Redrawn core diagram. Numbers are explained in the text; not a disassembly guide.

02 Charging, lights and specifications

Connect the Type-C cable to the device. Use a certified adapter rated 5V/2A; the source specifies CCC certification. Adapter sold separately.

A full charge generally takes about 6 hours, with possible variation. The indicator beside the port is red while charging; it turns green when full.

Do not charge continuously for more than 8 hours. Supervise charging and disconnect before leaving for a long time. Chargers must be used by adults or under adult supervision. Stop using damaged cables, plugs or casings.

Core specifications in the supplied manual: AI BOX; 1000mAh lithium battery; specification-table voltage 3.7V; maximum power 3W. The separate battery notice states 3.7–4.2V; that range is not an adapter output requirement. Materials: electronic components and plastic core. Origin: China. The standard field is blank in the source.

Type-C charging and indicator

GEN 2 · REDRAWN OPERATION DIAGRAM

1 Correct adapter

5V / 2A

Adapter sold separately · CCC-certified

2 Connect the port



Type-C / USB-C

3 Charging

 Red indicator on

4 Fully charged

 Indicator turns green

About 6 hours to full. Never exceed 8 hours continuously. Supervise charging and unplug before leaving.

Redrawn from the supplied printed manual. App screens explain the workflow; labels and positions may vary by version.

Redrawn charging connection and indicator states.

03 Power and pairing controls

A3: hold the rear power/pair button for 3 seconds to power on; the eyes light up. Hold again for 3 seconds to power off. Press this rear button three times to re-enter pairing.

A5: slide the rear power switch to turn on/off; the eyes light/go out accordingly. Press the separate rear pairing button three times to pair.

The rear pairing button and right-hand conversation button are different controls. Triple-clicking the rear button pairs the network; triple-clicking the conversation button switches chat modes.

Control reference

GEN 2 · REDRAWN OPERATION DIAGRAM

A3 Rear combined button

3s

Hold: power on / off

3×

Three clicks: pair

A5 Separate rear controls



Slide power switch: on / off

3×

Round pairing key: three clicks

Rear pairing key ≠ right-hand conversation button. Check your actual layout first.


Redrawn from the supplied printed manual. App screens explain the workflow; labels and positions may vary by version.

Identify the physical control before choosing a click pattern.

04 Tuya app and first connection

1. Search for “Tuya” in your phone’s app store, install or update the app, and sign in or register.
2. Connect the phone to a separately named 2.4GHz Wi-Fi network. The supplied manual excludes 5GHz-only networks and shared-name 2.4/5GHz networks; separate the names in router settings if needed.
3. Power on as described in Chapter 3 and press the rear pairing button three times to enter pairing mode.
4. Tap “+” on the Tuya home screen, then Add Device, and select the discovered device.
5. Select the same 2.4GHz network as the phone, enter its password as prompted, and wait for successful addition.
6. Open the device page and try a conversation. If not found, check charge, pairing mode and Wi-Fi band before retrying.


Names in the source include Gugu Owl and AI BOX. Choose your discovered unit; example names are not a reliable way to identify the hardware variant.

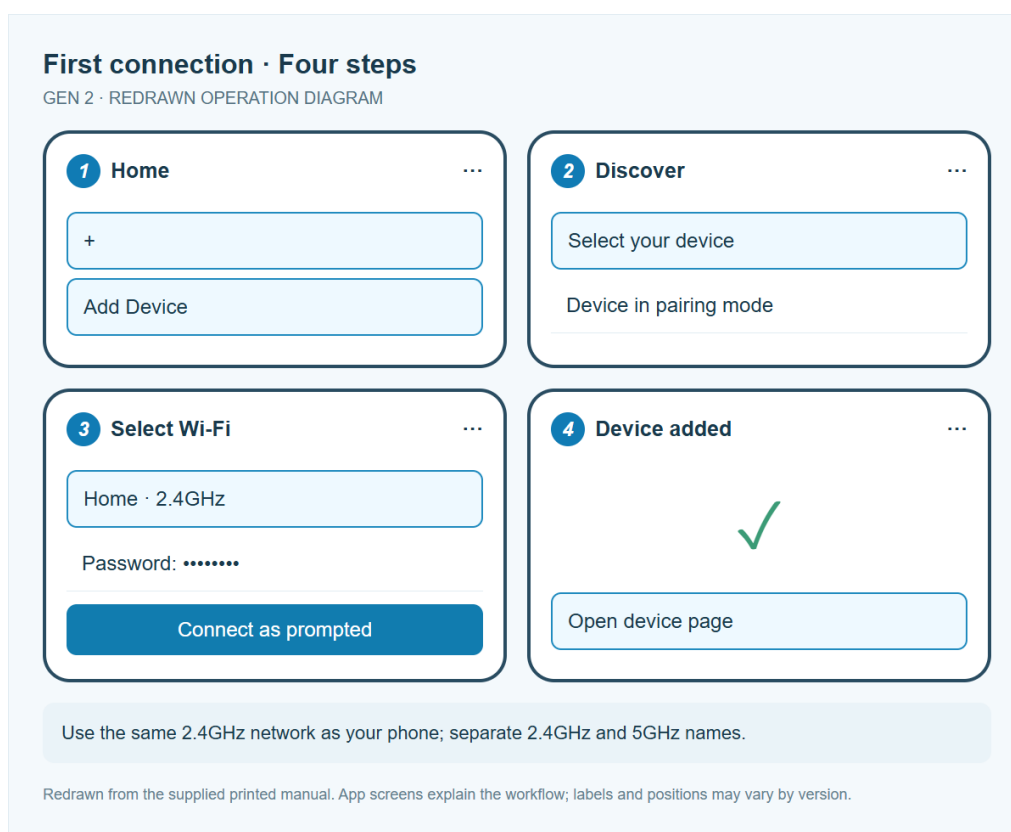

Redrawn pairing path from the supplied text. App labels may vary by version.

05 Volume, history and roles

1. Tap an online device on the Tuya home screen. On the device page, check battery and signal, open chat history and role memory, and adjust volume.
 2. Select Role Change to choose a recommended role, or open Custom to create one.
 3. Enter Name and Introduction; choose Language, Tone and Model from the available options. If shown, Optimize can help revise the introduction. Tap Save to apply the custom role.
 4. The supplied manual describes memory and learning for default and custom roles. Available roles, models and labels depend on the actual app version. Open the top-right “...” menu for Device Settings.
- The redrawn diagram explains navigation from the legible scan text; it is not a pixel-perfect screenshot or a guarantee of specific models.

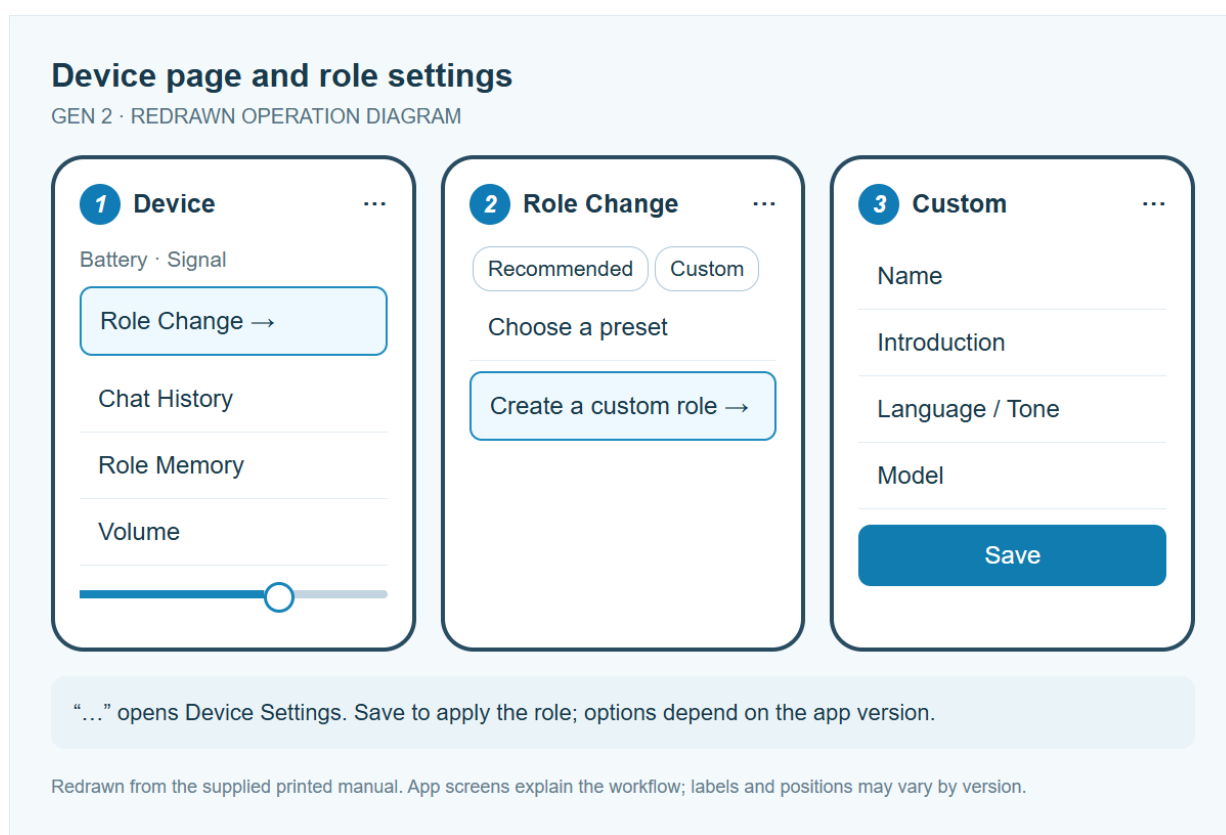

Redrawn device page, role selection and custom-role save path.

06 Conversation, mute and wake

Wake-up mode is the default. The source lists “Hey Tuya”, “Hi Tuya”, Chinese “你好涂鸦” and “小智同学”; the English page also lists “Hallo Tuya”. Response depends on the actual language version. Single-click the right-hand conversation button to start/pause.

Double-click that button to enable/disable petting in either conversation mode.

Triple-click to enter free chat; the unit announces the mode. You can interrupt and start a new topic. In free chat, single-click to mute/unmute; triple-click again to return to wake-up mode.

Exiting stops recording. Resume with a wake word or the button. After 30 seconds without conversation, reactivate; after 6 minutes, the screen goes off and the button is needed to wake it.

Conversation and wake

GEN 2 · REDRAWN OPERATION DIAGRAM

1 Default: wake-up mode

Use a wake word or chat button; single-click to pause.

3× Free conversation

Triple-click chat button to enter; repeat to return. Single-click mutes/unmutes.

2× Petting

Double-click chat button to enable/disable.

6m After screen-off

Press the button to wake. Reactivate after 30 seconds of silence.

Petting is inactive during recording or conversation.

Redrawn from the supplied printed manual. App screens explain the workflow; labels and positions may vary by version.


Redrawn conversation flow. Generation-2 and generation-3 controls differ.

07 Touch and expressions

Petting activates on power-up. Approach within 1cm of the touch sensor; its red indicator lights and a preset random audio clip plays.

Diagram 5 is inactive; diagram 6 is triggered. Double-click the right-hand conversation button to toggle petting. Touch is inactive while recording or chatting.

The sensor diagram explains the function; do not remove it or pull internal wires.

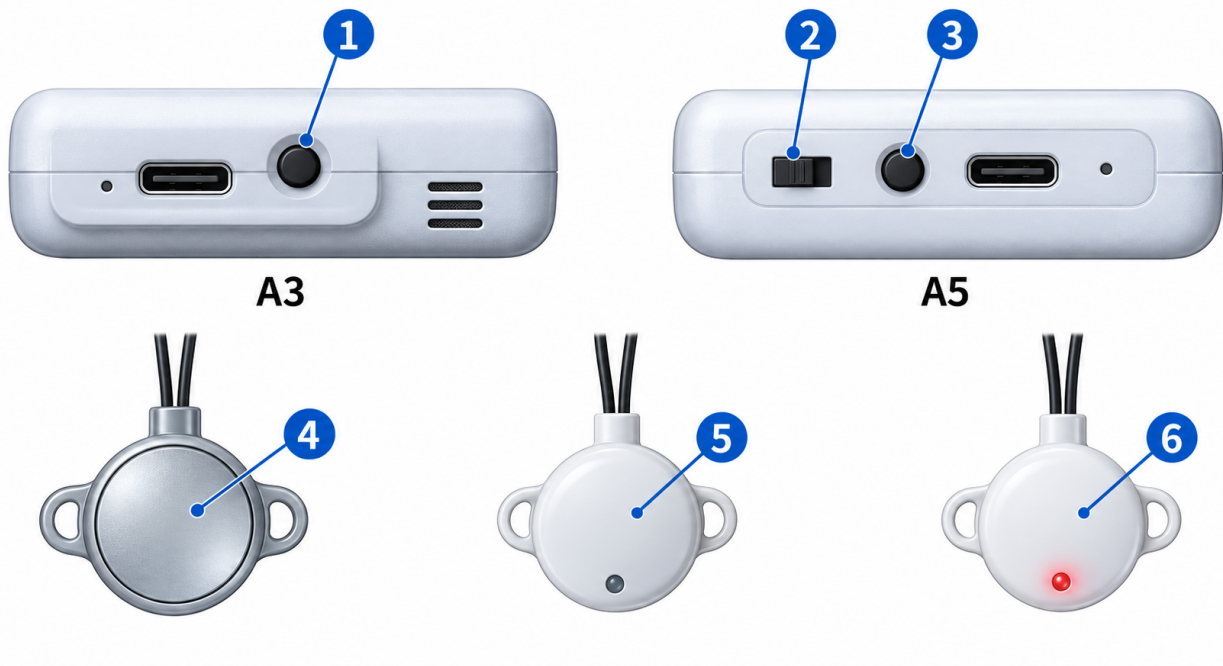

Unclear core and sensor photos have been redrawn; use this chapter's numbered key.

08 Useful voice commands

Speak commands in conversation mode. Adjustments take effect with your next utterance after the device receives the command.

Volume: “Your voice is too loud / too soft”; “Set the volume to 80%.”

Check: “What is the current volume?”; “What is the current battery level?”

Voice / role: “Switch to the XX role.” Gen 2 also lists “Change your voice.”

Language: “Can we talk in English?”

Speed: “Set speech speed to 50 / 80.”

End: “Stop talking”; “I do not want to chat anymore.”

Screen: “Turn off / on the screen”; “Open / close your eyes.”

Media: “Tell me a story”; “Play a song.”

Pause: “Pause playback”; “Stop playback.”

Expression: “I am so sad today”; “I am angry”; “I am very happy.”

Speak a command; applies on the next utterance

GEN 2 · REDRAWN OPERATION DIAGRAM

1 Adjust volume

“Set volume to 80%.”

2 Check battery

“What is the battery level?”

3 Stories and songs

“Tell me a story.”

4 Pause playback

“Pause playback.”


Redrawn from the supplied printed manual. App screens explain the workflow; labels and positions may vary by version.

Examples from the supplied manual; use during conversation.

09 Firmware updates

With the device online, open its page, tap the top-right “...” menu, scroll to Device Update, review the offered version and release notes, then tap Update.

The supplied manual estimates 3–10 minutes. Keep the device powered and connected during the update. Completion shows that the firmware is current. Version numbers in the old scan are examples, not a claim about the latest firmware.

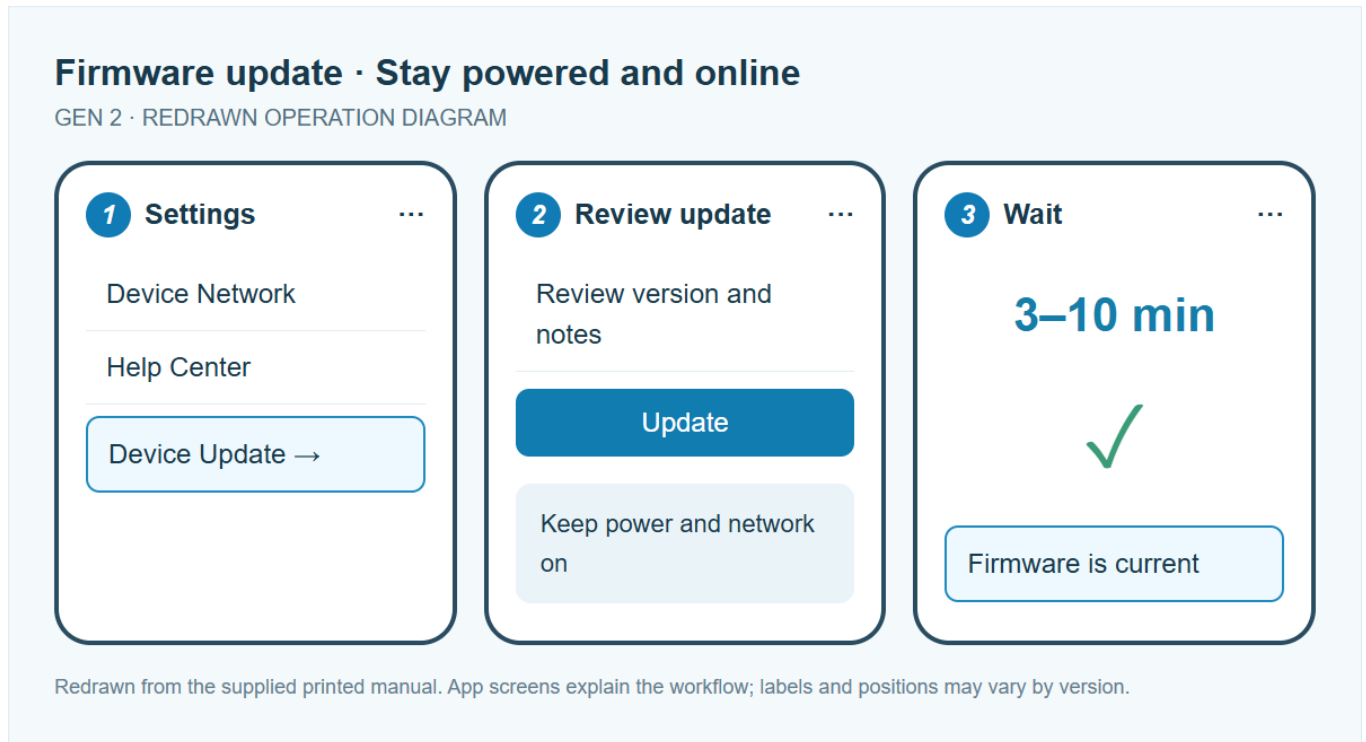

Redrawn update path; allow about 3–10 minutes and keep power/network connected.

10 Safety, cleaning and service

Safety and storage

Use at 0–40°C and store in a cool, dry place. Avoid direct sunlight, fire, heat, extreme temperature and very low air pressure. Do not impact, squeeze, puncture, dismantle, repair or modify the device. The built-in lithium battery is not user-replaceable; contact service if damaged.

Children require adult supervision. Check condition, installation and operation before use. Dispose of packaging safely to avoid suffocation. Stop using damaged devices, accessories, chargers or cables, or abnormal charging; contact service and do not resume until repaired. Never charge near sinks, bathtubs or other wet locations.

Cleaning

Power off and unplug first. The product is not waterproof: do not wash or immerse. Do not use salt water, hot water, bleach, strong acids or alkalis. Dampen a soft cloth with clean water, wring it dry and gently wipe. Press away excess moisture with a dry tissue; air-dry fully before use. Keep liquid out of ports and gaps. Contact service for stubborn stains.

Warranty and service

The supplied manual states that confirmed non-human-induced performance faults receive free repair within one year from purchase and acceptance. Contact the seller for returns/exchanges and retain the warranty card and receipt. Zoowai policy: one-year warranty for non-human-induced faults; paid repair for accidental damage or expired warranty; repair shipping is paid by the customer. See PDF appendices for the manual's exclusions, disclaimer and blank service record.

Power off and unplug before cleaning

GEN 2 · REDRAWN OPERATION DIAGRAM

1 Power off / unplug

Do not clean while on or charging.

2 Wring cloth dry

Dampen a soft cloth with clean water; wring dry.

3 Wipe gently

Keep liquid out of ports and gaps.

4 Air-dry fully

Press with dry tissue; allow to dry before use.

Never wash or immerse. No hot/salt water, bleach, strong acids or alkalis.

Redrawn from the supplied printed manual. App screens explain the workflow; labels and positions may vary by version.

Power off and unplug, wipe with a wrung-dry cloth, then air-dry. Do not wash or immerse.

Source disclaimer and exclusions

Exclusions listed in the supplied manual: expired warranty; human-caused physical damage or liquid ingress; unauthorized dismantling or firmware flashing; force majeure; resale; use contrary to law or the manufacturer agreement; faults not attributable to inherent design, manufacturing or quality; and other exclusions under the official after-sales policy.

Disclaimer transcribed from the supplied English manual: Thank you for purchasing this product. The content herein concerns your safety, legal rights, and responsibilities. This statement may be updated; please follow the product's official social media channels for the latest information.

By using this product, you are deemed to have carefully read, understood, acknowledged, and accepted all terms of this disclaimer and safety guidelines. You agree to use the product only in appropriate environments and for legitimate purposes, and assume full responsibility for all consequences of its use. You consent to comply with these terms, including health and safety precautions, and all related product policies and guidelines. Failure to do so, or any misuse that results in property loss or personal injury, will absolve the product manufacturer of all liability.

When using third-party products, services, or applications (Third-Party Content) through this device, you must adhere to the relevant policies, rules, and agreements of the respective third party. In the event of any conflict between such third-party terms and this disclaimer, the terms of this disclaimer shall prevail. Under no circumstances shall this product be deemed a licensor of Third-Party Content, nor shall it make any representations or warranties regarding such content, or assume any liability for its features or functionality.

Editorial note: this reproduces the supplied printed statement in its original context. No verifiable official social-media link is supplied. Zoowai service access and store policy are available in the website support center.

Warranty record · Keep your receipt

Keep the warranty card safe and unaltered. Contact the seller for returns, exchanges and service terms. This is a blank record and submits no information.

User name

Address

Email

Phone number (country code)

S/N (serial number)

Place of purchase / Seller

Date of purchase

Battery reminder: the built-in battery is not user-removable or replaceable. Contact service if damaged. Power off and unplug before cleaning.